



Moritex



# Triplexsense

## Measurement Essentials for Skin Counselling



### Skin Counselling With the Element of Time

The beauty of our skin has different qualities as we age and each client is aware of how their skin's character changes as time progresses.

**Triplexsense** subtly makes fast, accurate measurements of skin moisture, sebum (oiliness) and skin elasticity and presents an assessment of skin condition based on average data for the entered age group.

**Request your free copy of Moritex's Skin Counselling Advice and Support Handbook and discover how much more you can see.**

### More Time for Your Client

Designed for simple and convenient operation, counselling based on this data can be offered much more accurately and smoothly than was possible before.

#### Measure

- Skin moisture
- Skin sebum
- Skin elasticity

#### Call or Email

See pricing online  
Quantity Pricing Available

Dealer pricing also  
available for resellers

Science Technology Resources  
5274 Scotts Valley Dr. #204  
Scotts Valley, CA 95066  
USA


Toll Free: 877 395-1001  
Fax: 866 991-9591  
email: [sales@sciencetechnologyresources.com](mailto:sales@sciencetechnologyresources.com)  
web: [www.sciencetechnologyresources.com](http://www.sciencetechnologyresources.com)





# Triplexense

## Features

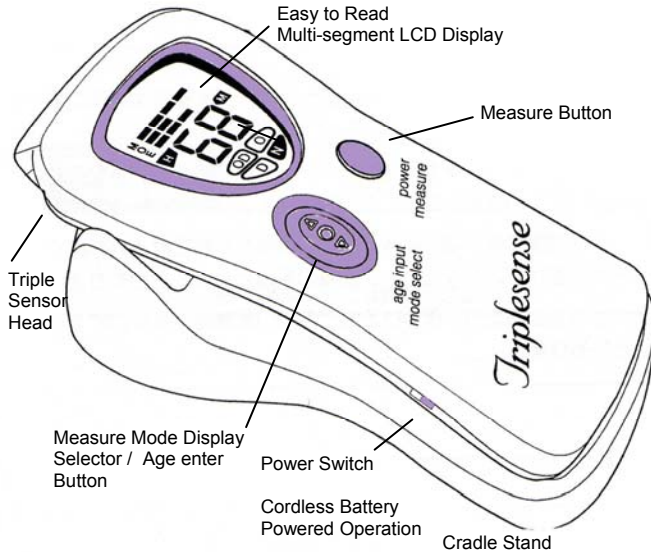

## Product Specification

**Measurement Display:** Measured values for Moisture, Sebum and Elasticity are displayed as separate 2-digit numbers by toggling between measurement type. Bar graph displays relative values.

### Measurement Type and Method

Skin Moisture: Electrical capacitance.

Skin Oil (Sebum): Optical system.

Skin Elasticity: Ultrasonic vibration system.

### Skin Analysis Information

A) Skin condition vs Age: displayed on a 3 level scale according to entered age.


B) Skin balance displayed as one of 4 types.

**Display:** Custom multi-segment LCD.

**Power:** 2 AAA Batteries (alkali cell recommended)  
Current Consumption: 25mA

**Weight:** 115 g Approx without batteries.

### Dimensions

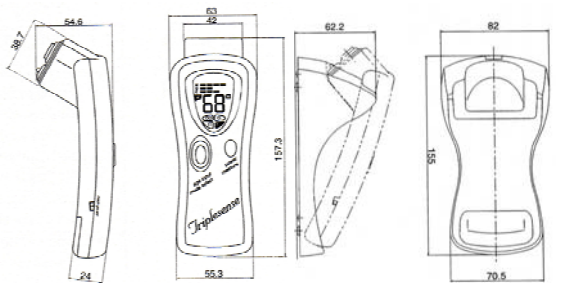

Triplexense

Stand

(mm)


## Technically Speaking

Moisture is measured using a proven electronic sensor whilst sebum is measured using Moritex's latest direct contact optical sensing technique. The sensors only require simple cleaning to remain at peak performance. Skin elasticity is tested using a probe that vibrates at ultrasonic frequency.


Measured results and skin condition assessments are clearly displayed on the LCD. Assessments are based on data comparison with average data for in the age inputted.

The low current consumption electronics allows the device to be powered by conventional batteries so you are free from power cords.

## Triple Sensor Head

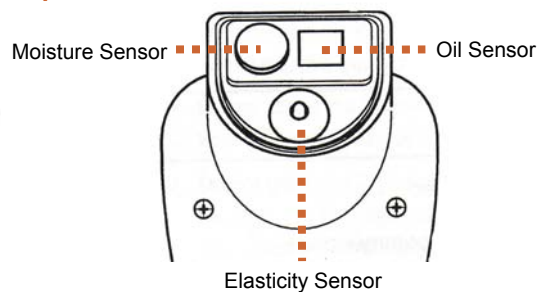

## Measurement Display

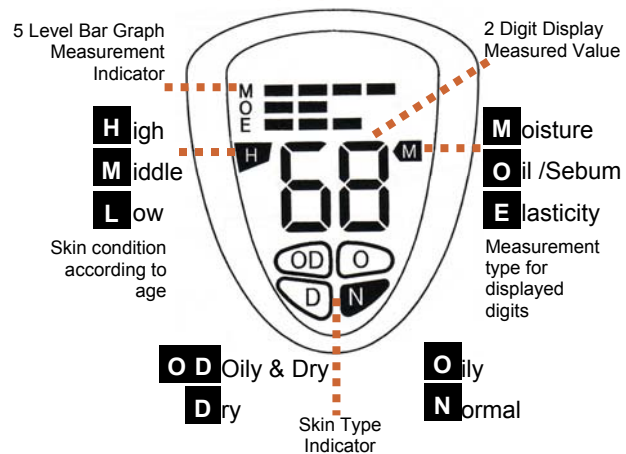

Email or Call

See pricing online  
Quantity Pricing Available

Dealer pricing also  
available for resellers

STR - Science Technology Resources  
5274 Scotts Valley Dr. #204  
Scotts Valley, CA 95066  
USA

Toll Free: 877 395-1001  
Fax: 866 991-9591  
email: sales@strscopes.com  
web: www.strscopes.com

